

ORIA

Dante Card Installation Guide



AUDIANT

Audient ORIA Optional Dante® Card Fitting Instructions

Please follow the step by step instructions below to find out how the Dante card can be mounted to the ORIA:

Before installing the Dante card, ensure the ORIA has v1.1.0 or newer firmware installed. If not you can update via the ORIA app.



SAFETY TIP: For your own safety, please ensure that you are wearing a grounding wrist strap.

1. Ensure all external connectors are disconnected - especially AC power.
2. Remove the lid by removing the 14 screws on the top panel with a Phillips screw driver.
3. Remove the rubber network port cover from the rear panel of the ORIA.
DO NOT throw this cover away as it may be needed again.



AUDIANT


4. Behind the Network Port, there are three silver, hexagonal posts protruding from the board which we refer to as stand-offs. Three screws will be provided with the Dante Card. Place the network card on top of the stand-offs and use the screws to mount the network board.

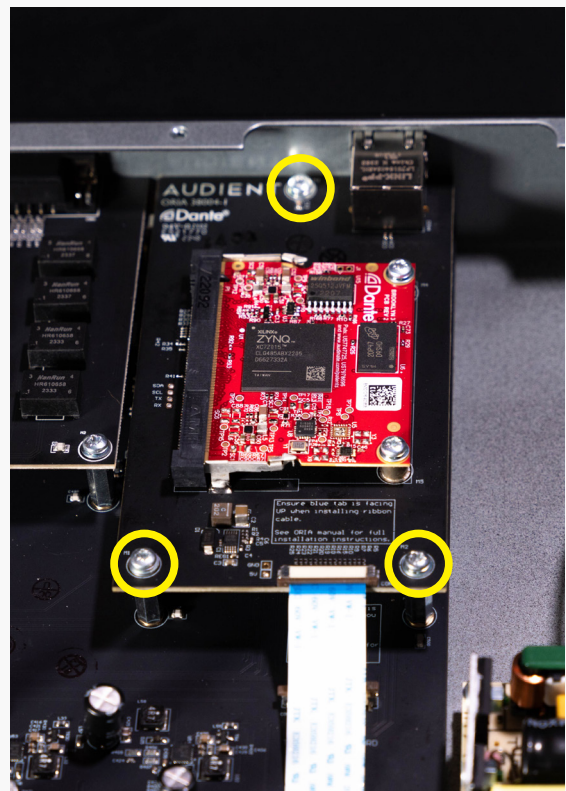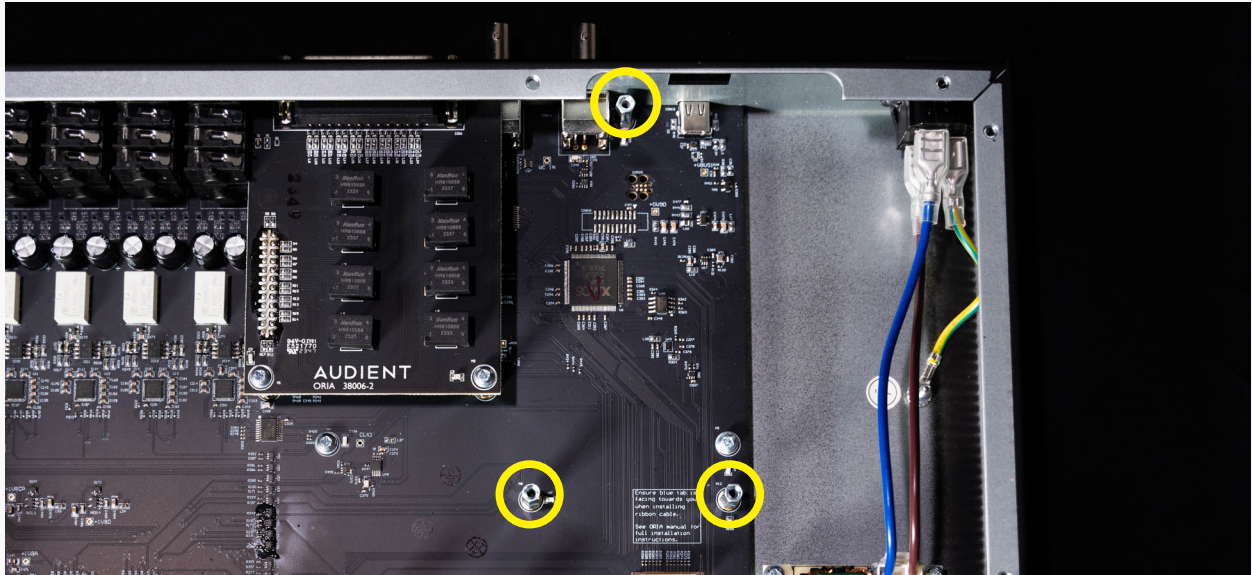

AUDIANT

5. Connect the network board to the main board using the supplied ribbon cable. Make sure the blue tab on the ribbon cable is facing up as in the picture. Please handle the ribbon cable with care.

(Please note, a small number of ORIA units from the initial batch have screenprinting that describes the cable orientation incorrectly. Please disregard this and simply ensure the cable orientation matches the image below)

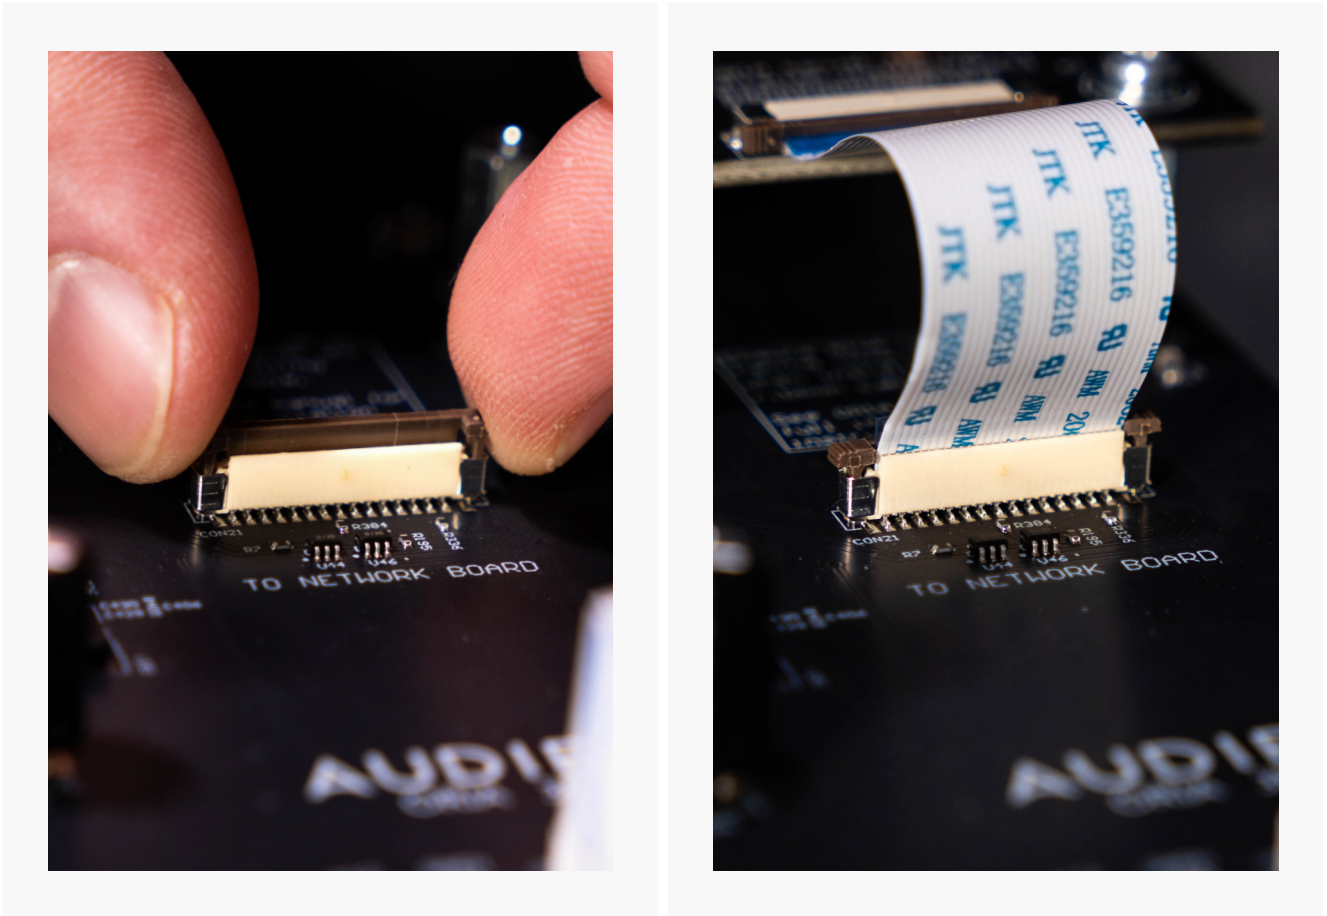

6. Put the lid back on and screw it back down firmly.

Important Note: If at any point the network board is removed from the ORIA unit, the rubber port cover must be refitted. If the cover is not fitted then the unit may not meet local safety regulations. If the rubber cover has been lost or misplaced, please contact Audient customer support (support@audient.com) who'll be able to supply a replacement.